



REPLACEMENT PARTS

MODEL NO.
71245A

CAPACITY
2 1/4 TONS

DESCRIPTION
AIR AND HYDRAULIC FLOOR JACK



INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO
1	Release Valve Assembly	218085	1
2	Release Valve	218081	1
3	Checkball	218082	1
4	Copper Washer	218083	2
5	Guide Washer	218084	1
6	Valve Port Screw	218086	1
*7	Backup Ring	218506	2
*8	O-ring	218087	2
9	3/8" Diameter Checkball	9008	2
10	1/4" Diameter Checkball	9004	2
11	Overload Cover Screw	218088	1
*12	Rubber Packing	218089	1
13	Rubber Cover	218091	1
14	Overload Adjustment Screw	218092	1
15	Overload Spring	218093	1
16	Overload Valve	218094	1
17	Pump Piston	218516	1
*18	Oil Seal	218096	1
*19	Backup Ring	218518	1
*20	O-ring	218519	1
21	Oil Fill Plug	218521	1
22	Hydraulic Block	218097	1
23	Snap Ring	218523	1
*24	U-cup Seal	218524	1
*25	Backup Ring	218526	1
26	Ram Bearing	218098	1
27	Filter	218099	1
28	By-pass Spring	218101	1
29	Spring Retainer	218531	1
30	Valve Pin	218532	1
31	Limit Pin	218533	1
32	Ram	218102	1
*33	O-ring	218103	1
34	Cylinder Nut	218104	1
*35	O-ring	218106	1
*36	Oil Seal	218539	1
37	Magnet	218429	1
38	Handle Base	218107	1
39	Handle Base Bolt	218108	1
40	Handle Release Stem	218543	1
41	Flat Gear	218544	1
42	Nut	218546	1
43	Cotter Pin	218547	1
44	Handle Torsion Spring	218109	1
45	Pump Piston Pin	218111	1
46	Handle Assembly	218440	1
47	Lockwasher	218112	2

INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO
48	Nut	218113	2
49	Saddle	218114	1
50	Guide Arm	218116	2
51	Saddle Base Pin	218117	1
52	Saddle Base	218118	1
53	Guide Arm Pin	218119	2
54	Chassis Assembly Complete	218115	1
55	Guide Arm Bolt	218123	2
56	Spacer Pin	218124	1
57	Front Wheel	218126	2
58	Wheel Washer	218127	4
59	Wheel Retaining Ring	218128	2
60	Screw	218129	8
61	Ram Retraction Spring	218131	1
62	Air Valve	218132	1
63	O-ring	218133	1
64	Filter	218134	1
65	Flat Washer	218136	2
66	Caster Wheel Assembly	218525	2
67	Caster Lockwasher	218573	2
68	Caster Nut	218574	2
69	Washer	218137	2
70	Mounting Bolt	218138	2
71	Spring	218139	1
72	Left Handle Base Bolt	218141	1
73	Right Handle Base bolt	218142	1
74	Valve Cap	218143	1
75	Separator	218144	1
76	Valve Holder Ring	218434	2
77	Valve Hook	218436	1
78	Expansion Pin	218437	1
79	Handle Grip	218438	1
80	Upper Handle	218588	1
81	Lower Handle	218589	1
82	Handle Screw	218591	1
83	Trunion Cotter Pin	218146	1
84	Air Valve Assembly	218140	1
85	Nut	218148	1
86	O-ring	218149	1
87	Lockwasher	218151	2
88	Oil Strainer	218152	2
89			
90	Plug	218147	1
91	Valve Body	218154	1
92	Bolt	218156	4
93	Washer	218157	4
94	Lockwasher	218158	4

INDEX NO.	DESCRIPTION	PART NO.	REQ'D NO
95	Bolt	218159	4
96	Elevator Arm	218160	1
97	Trunion	218161	1
98	Trunion Arm Bolt	218162	2
99	Trunion Arm	218163	2
100	Packing	218164	1
101	Bolt	218166	1
102	Washer	218167	1
103	Screw	218168	10
104	Air Hose	218169	1
105	Hose Clamp	218171	2
106	Elbow Fitting	218172	1
107	Cover Plate	218173	1
108	Protector Plate	218174	1
109	Spring	218176	1
110	Hose Nipple	218177	1
111	Copper Washer	218178	1
112	Packing Guide	218179	1
113	Pump Cylinder	218181	1
114	Cylinder	218182	1
115	Air Pump Complete	218175	1
116	O-ring	218183	1
117	Back-up Ring	218184	1
118	Back-up Retainer	218186	1
119	Nut	218187	1
120	Spring	218188	1
121	Spring Retainer	218189	1
122	Plunger	218191	1
123	Piston	218192	1
*124	O-ring	218193	2
125	Gasket	218194	1
126	Packing	218196	1
127	Valve Body	218197	1
128	Washer	218198	1
129	Valve	218199	1
130	Nut	218681	1
131	End Cover	218682	1
132	Screw	218683	2
133	Lockwasher	218684	2
134	Spring Washer	218686	4
135	Bolt	218687	4
136	Hydraulic Block Assy.	218685	1
137	Washer	218688	2
138	O-ring	218689	1
	Repair Kit	218690	