



**REPLACEMENT PARTS**

**MODEL NO.**  
72220

**CAPACITY**  
20

**DESCRIPTION**  
HYDRAULIC FLOOR SERVICE JACK



INDEX NO.	DESCRIPTION	PART NO.	QTY.
1	Handle	226006	1
2	Control rod, valve	226004	1
3	Control rod, valve	226003	1
4	Spring	226002	1
5	Cap, handle	226001	1
6	Handle assembly	226005	1
7	Set screw, handle	226009	1
8	Washer, spring	226008	1
9	Fork, handle	226007	1
10	Collar	226011	1
11	Step, cam	226019	1
12	Pin, spring	226021	1
13	Spring	226018	1
14	Bracket, handle fork	226017	1
15	Pin, foot pedal	226016	1
16	Pin, cotter	226014	1
17	Collar	226013	1
18	Pedal, foot	226012	1
19	Pin, cotter	226034	1
20	Bar, connecting	226022	1
21	Pin, cotter	226023	1
22	Connecting pin, plunger	226024	1
23	Plunger, pump	226026	1
24	Nut, lock	226027	1
*25	Packing, rubber	226028	1
26	Seal, oil	226029	1
27	Ring, backup	226031	1
*28	O-ring	226032	1
29	Tank, oil	226044	1
*30	Packing, rubber	226043	1
*31	O-ring	226046	1
32	Connecting rod, release valve	226047	1
33	Spring	226048	1
34	Cylinder, pump	226049	1
*35	Packing, copper	226051	1
36	Strainer, oil	226052	1
37	Box, oil	226053	1
38	Plug, cap	226062	1
*39	Packing, copper	226063	1
*40	Steel, ball	226064	1
*41	Steel, ball	226066	1
42	Nut	226059	1

INDEX NO.	DESCRIPTION	PART NO.	QTY.
43	Pin, cotter	226058	1
44	Valve, release	226057	1
45	Housing, release valve	226056	1
*46	Packing, copper	226054	1
*47	Diaphragm, oil tank	226042	1
48	Cover, oil tank	226041	1
49	Bolt	226039	1
*50	Packing, fiber	226038	1
51	Bolt	226037	1
52	Fork	226036	1
53	Connecting Bar	226033	1
54	Cover	226061	1
55	Retainer, piston packing	226079	1
*56	Packing, cork	226081	1
57	Nipple, pipe	226082	1
58	Ring	226083	1
*59	Gasket, fiber	226084	1
60	Nut, tank	226086	1
*61	Seal, oil	226087	1
62	Bolt	226088	1
63	Connecting joint, piston	226089	1
64	Arm assembly	226090	1
65	Nipple, grease	226092	1
66	Arm	226093	1
67	Pin (A), arm	226099	1
68	Base, saddle	226101	1
69	Saddle	226091	1
70	Ring, snap	226103	1
71	Rod, link	226102	1
72	Pin, link rod	226098	1
73	Pin, cotter	226096	1
74	Pin, piston	226097	1
75	Pin (B), arm rod	226094	1
*76	O-ring	226078	1
77	Housing, by-pass valve	226077	1
78	Rod, piston	226073	1
*79	Packing, copper	226071	1
*80	Packing, U-type	226069	1
81	Cylinder	226068	1
*82	O-ring	226067	1
*83	Spring, by-pass	226072	1
*84	Ball, steel	226074	1

INDEX NO.	DESCRIPTION	PART NO.	QTY.
85	Rod, by-pass	226076	1
86	Hanger (rear), spring	226106	1
87	Spring	226104	1
88	Stopper, arm	226119	1
89	Shaft, front wheel	226126	1
90	Washer	226136	2
91	Wheel, front	226137	2
92	Guide, roller	226131	4
93	Washer	226138	2
94	Roller	226132	4
95	Nipple, grease	226129	6
96	Nut, front wheel	226127	2
97	Washer	226128	2
98	Wheel, front	226133	2
99	Ring, snap	226134	2
100	Washer, spring	226121	2
101	Nut	226122	2
102	Washer	226123	2
103	Nut	226124	2
104	Boss	226116	2
105	Washer	226117	2
106	Screw, set	226118	2
107	Rivet	226114	2
108	Shaft, handle	226113	1
109	Bolt	226112	2
110	Washer, spring	226111	2
111	Washer	226108	1
112	Ring, snap	226107	1
113	Frame	226109	1
114	Washer, spring	226143	2
115	Bolt	226144	2
116	Caster assembly	226140	2
117	Shaft, rear wheel	226152	2
118	Bush	226151	2
119	Wheel, rear	226149	2
120	Fork, caster	226148	2
121	Ring race, lower	226147	2
122	Steel ball	226146	2
123	Ring race, upper	226142	2
124	Bracket	226141	2
125	Cap	226139	2
126	Guide roller, outer wheel	226153	2
127	Roller, outer wheel	226154	20

\* = Represents those parts included in repair kit #226500