



INDEX NO	DESCRIPTION	PART NO.	REQ'D NO
1	Base Assembly 76320A	620120	1
*2	3/16" Check Ball	9007	3
3	Spring	612176	1
4	Washer	612177	1
5	Set Screw	620121	1
*6	5/16" Check Ball	9005	1
*7	O-Ring	612179	1
8	Release Valve	612181	1
9	Lever Assembly	612182	1
10	Set Screw	612183	1
11	Set Screw	612184	1
12	Washer	612186	1
*13	7/32" Check Ball	9001	1
14	Plunger	612221	2
15	Reservoir	620122	1
16	Ram	620123	1
17	Pin	620124	1
18	Pin	620125	1
19	See item 13	9001	
20	Fitting	612194	1
21	Spring	612196	1
22	Washer	612197	1
23	Ram Bearing	620126	1
*24	Backup Ring	620127	1
*25	O-Ring	620128	1
26	Ram Bearing	620129	1
27	C-Ring	620130	1
28	Primary Cylinder	620131	1
29	Ram Steel Washer	620132	1
30	Extension Screw Assembly	620133	1
*31	Wiper Ring	620134	1
*31	O-Ring	620135	1
33	Primary Cylinder Nut	620136	1
34	Lower Handle	612208	1
35	Upper Handle	612209	1
36	Air Pump Assembly	620137	1
*37	Reservoir Fill Plug	612188	1
*38	O-Ring	612189	1
39	Elbow Fitting	612211	2
40	Steel Hose	620138	1
41	Spring	612213	2
42	Spring Buckle	612204	1
43	Nut	612219	1
44	Cover	612218	1
*45	Seal Ring	612217	1
46	High/Low Check Valve	612216	1
*47	O-Ring	620139	2
*48	O-Ring	620140	1
*49	O-Ring	612223	1
*50	Backup Ring	612224	1
51	Air Valve	220140	1
52	Air Hose	220150	1

*Items in Repair Kit 621100

REPLACEMENT PARTS

MODEL NO.
76320A

CAPACITY
20TON

DESCRIPTION
Air Operated Hydraulic Bottle Jack

