



PROFESSIONAL LIFTING EQUIPMENT

Repair Parts Sheet

910052A Electric Pump

L2145 01/07

Rev. A

For Date Codes Beginning With "D"

Torque item 18 to 12-18 in-lbs. Apply Loctite 242 to threads.

Seal motor end cap to pump manifold at the rods and center boss using RTV sealant.

Attach item 24 to item 10.

Torque item 15 to 34-38 in-lbs. (39,2-43,7 cm/kg).

Torque item 121 to 16-19 ft-lbs. (22-26 Nm).

Torque item 195 to 6-10 ft-lbs. (8-13 Nm).

Torque item 5 to 47-53 in-lbs. (5,3-6,0 Nm).

Torque item 138 to 25-30 in-lbs. (28,8-34,5 cm/kg.) Apply Loctite 242 to threads.

Apply Loctite 545 to threads of item 148.

Align tube to face gear mesh to allow for splash lubrication.

Set relief valve (item 150) to 250-400 psi (17,3-27,9 bar). Stake threads after setting relief valve.

Torque item 109 to 15-16 ft-lbs. (20-22 Nm).

Install item 117 flush to .010" (.25 mm) recessed from manifold surface.

Apply sealant to the top of the reservoir before applying the cork gasket. Do not use any sealant on the nitrile gasket.

Pendant Wiring:

Jog

Terminal 1 - White

Terminal 2 - Black

Figure 1: Exploded View.

Table 1: Repair Parts for Figure 1

Item	Part Number	Qty.	Description
2	★DA12088167SR	1	Gasket (includes item 156)
3	U952031902SR	1	Reservoir Assy.
4	DA6954167	8	Washer
5	B2521028	8	Screw
6	E1100004	1	Thermostat
7	C701222	2	Washer
8	F658028	2	Screw
9	DA3709900SR	1	Power Cord
10	DA3776006	2	Pin
11	DA11539380	1	Receptacle
14	DA15066	3	Lockwasher
15	B1018121	3	Hex Nut
16	U952031901SR		Shroud Assy.
17	CW261225	6	Eyelet
18	F866028	6	Screw
19	CW259298	1	Baffle
20	E1500002	1	Switch
21	DA3712900	1	Wire Assy.
22	DA3730900SR	1	Wire Assy.
23	DA3711900SR	1	Wire Assy.
24	DA11540380	1	Receptacle
26	CU971003	4	Pop Rivet
27	DA608024	1	Vent Plug
28	★B1906503	1	O-Ring
38	E300006	1	Transformer
39	E1300008	1	Relay
40	CW350003	4	Pop Rivet
41	CR881900SR	1	Pendant Assy.
42	DA1973900SR	1	Wire Assy.
43	DA3713900SR	1	Wire Assy.
44	DA1975900SR	1	Wire Assy.
45	DA1976900SR	1	Wire Assy.
67	A1009245	1	Plug

Item	Part Number	Qty.	Description
102	CW179259	1	Motor
105	CW298950SR	1	.53 Piston Block
106	★B1007503	1	O-Ring
107	CW299950SR	1	.24 Piston Block
108	★B1012803	1	O-Ring
109	B1010028X	4	Screw
110	CW252107	1	Bearing
114	CW301228	1	Driven Gear
115	★B1097057	1	Spring Pin
116	CW199107	1	Bearing
117	CW251107	1	Bearing
118	CW302107	1	Bearing
119	CW303104	1	Shaft
121	DA5999900SR	1	Relief Valve
123	DA12199290	1	Ball Seat Insert
124	★B1004016	1	Ball (.156 inch)
125	DC990900SR	1	Ball Guide
126	A109164	1	Spring
128	DA252028	1	Adjustment Screw
129	★S1167	2	Gasket
130	CW306055	1	Lock nut
131	CW307055	1	Cap nut
132	★B1009016	1	Ball (.312 inch)
133	C790010SR	1	Stem
134	★B1111203	1	Viton O-Ring
135	★B1111564	1	Washer
137	B1086066	1	Lockwasher
138	B1323028	1	Socket head screw
139	DA544070SR	1	Handle
141	A1016245	1	Plug
142	DA1011096	1	Elbow
143	DA261268	1	Tube
144	CW467044	1	Retaining ring
145	★DA445107	2	Bearing

★ Indicates items included in and available only as part of Repair Kit 910052AK.

Table 1: Repair Parts for Figure 1 (continued)

Item	Part Number	Qty.	Description	Item	Part Number	Qty.	Description
146	★B1007016	1	Ball (.25 inch)	156	★SEE ITEM 2	1	Gasket
147	★DA1564110	1	Spring	192	B1012565	1	Backup Washer
148	DC433950	1	Plug Assy.	193	★DC19503	1	O-Ring
150	DA610900SR	1	Relief Valve	195	DC866027	1	Lock Screw

★ Indicates items included in and available only as part of Repair Kit 910052AK.

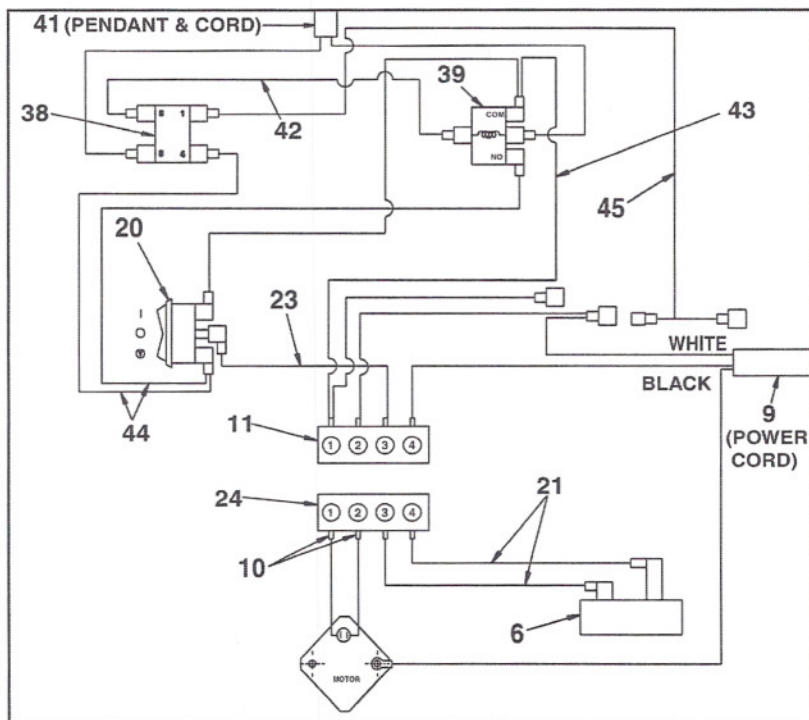


Figure 2: Wiring Diagram.

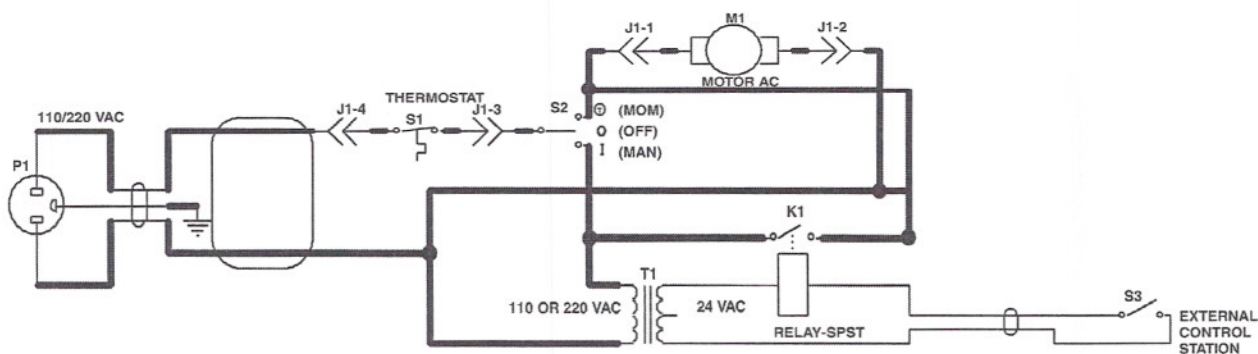


Figure 3: Electrical Schematic.

Motor Brush Kits:

DA9655380	brush kit for 115 volt motor
DA9656380	brush kit for 230 volt motor
DA9657020	brush cap



PROFESSIONAL LIFTING EQUIPMENT

Tel. No. (310) 639-4000